

2013

RIDE Inc. Magnegress Swinging Davit Supplement Procedures



Special Instructions/Conditions of Use

Reading user procedure manual prior to use is essential

Only persons that have been deemed competent in the operation of the system should operate the system


Magnegress

2013/08/15


Rev 1.01



Working & Transport Position of the Swinging Davit

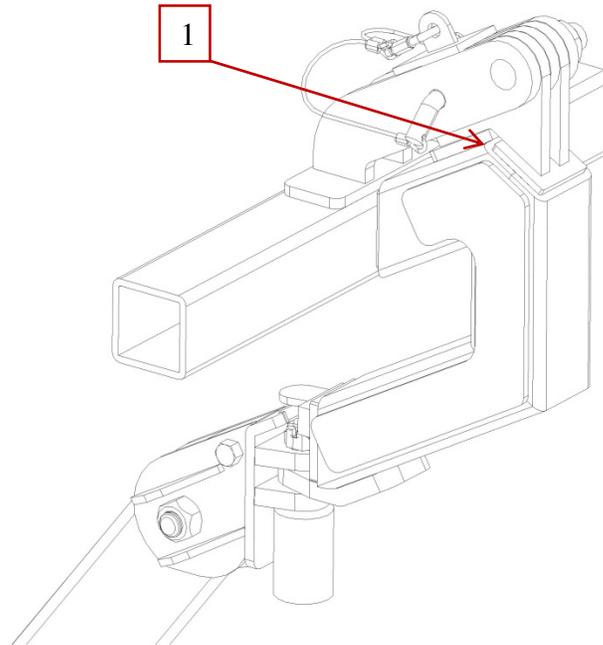

To place in working position, lift swinging davit into the work position & install main pin (1) & keeper pin. The Davit is now ready for use.

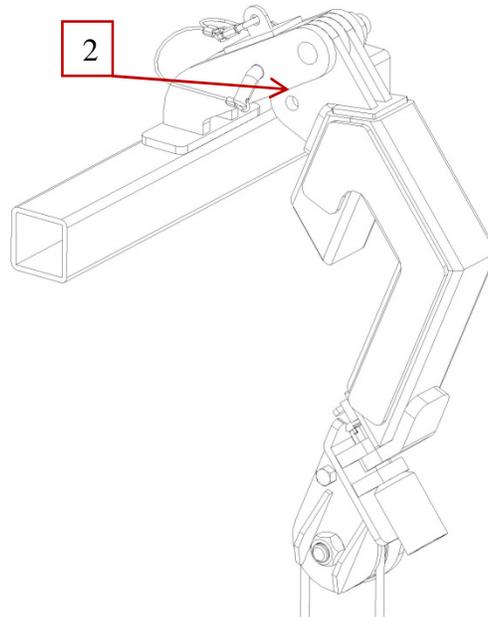

To place in transport mode, Remove the pins, lower the davit arm & re-install the pin (2) & keeper pin to prevent the pins & cables from getting entangled.